
BSCW1444C

Cupped Razor Closing Wheel for 1700 Deere and Kinze planters with bolt on hubs

Installation Instructions

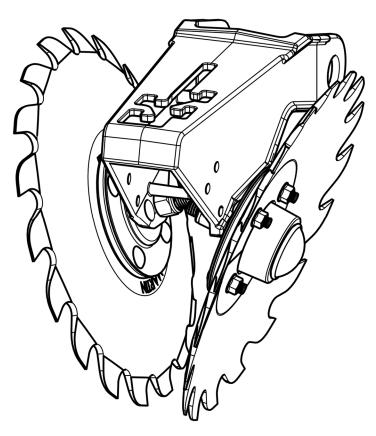



Martin Planter Attachments

Martin Industries LLC

206 Elk Fork Road Elkton, KY 42220

Telephone: 270-265-5817 E-Mail: martin@martintill.com


www.martintill.com



Step 1: Assemble Wheel

- 1) Attach the spade wheel on to the CHU44-B2 hub, with part number facing the hub.
- 2) Place the BC-01 bearing cap on the opposite side of the CHU44-B2 hub.
- 3) Insert the four 3/8" X 1 1/4" carriage bolts then add the four 3/8" flange nuts. Tighten.
- 4) Torque 3/8 bolts to 23 ft-lbs. Re-tighten after first day's use.
- 5) Repeat the assembly instructions for the opposite side assembly.

(IMPORTANT NOTE: The RTW141418RC will mount on the LEFT SIDE and the RTW141418LC will mount on the RIGHT SIDE. The Part Number on the wheels will be facing the furrow.)

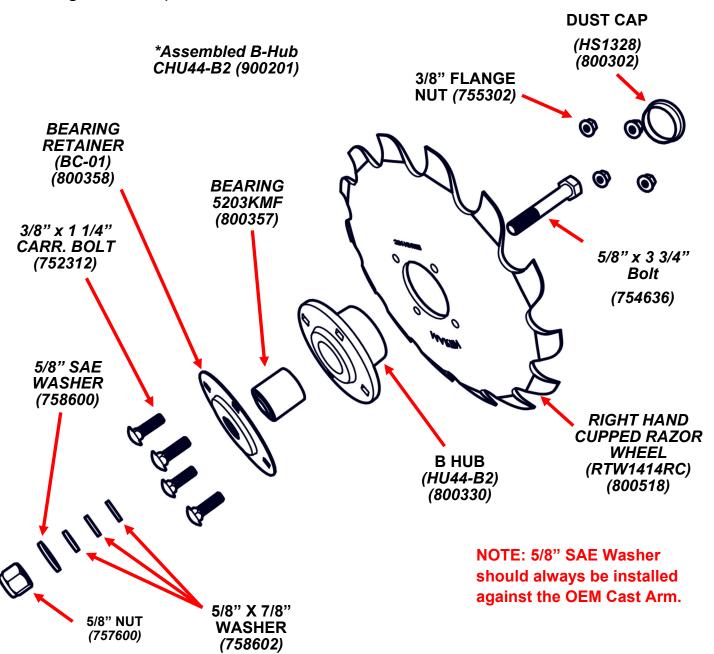


Step 2: Install BSCW1444C to Tail Wheel Housing

1) For Recommended Spacing between wheels, use 1 x 5/8 SAE washer (788601)and 3 x 5/8 ID X 7/8 OD (788602) Washers per wheel.

Note: SAE Washer should always be installed against Cast Surface of Tail Wheel Housing.

- 1) Insert the 5/8" x 3 3/4" bolt thru the hole in the tail wheel housing, then add the nut and tighten. Repeat for opposite side.
- 2) Recommended distance is 2 3/4" as shown below. To decrease spacing, move shim washers (788602) under the head of bolt as shown below.

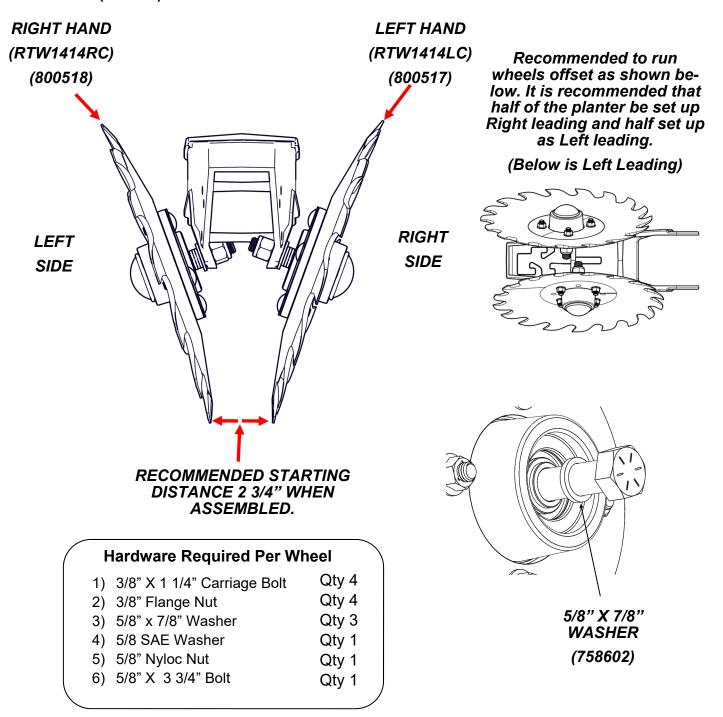



The most trusted name in no-till Established 1991

Martin Industries LLC

206 Elk Fork Road Elkton, KY 42220

Telephone: 270-265-5817

E-Mail: martin@martintill.com

www.martintill.com