


Install lower end of spring to spring arm using 1/2" x 2" flange head bolt and two 1/2" hex nuts (furnished) as shown.

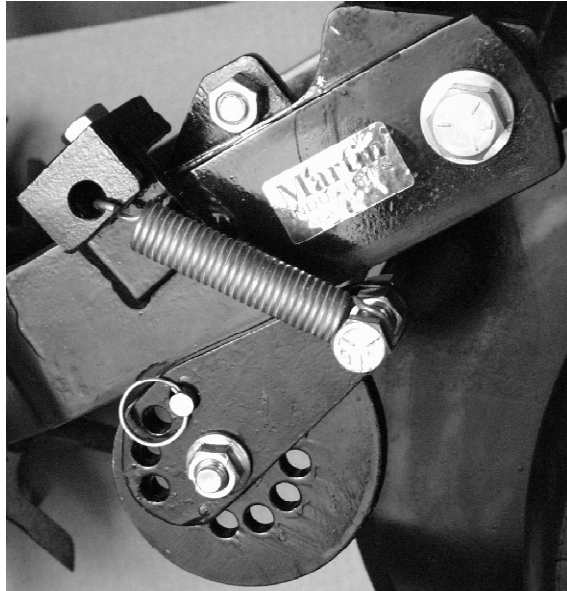



To adjust height with cam, pull detent pin. Use a 3/4" wrench to rotate cam to desired height. Reinsert detent pin.

To adjust spring pressure, remove detent pin. Place 3/4" wrench on spring bolt. Rotate up or down until desired down pressure is achieved. Reinstall detent pin.

CDP-01

Cam & Down Pressure Spring

Installation Instructions

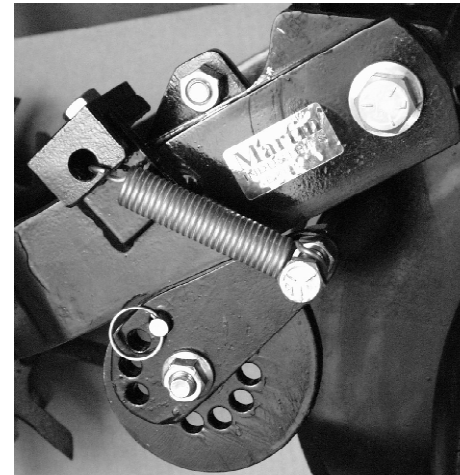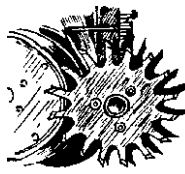

Martin Planter Attachments

Martin Industries LLC

206 Elk Fork Road*Elkton, KY 42220

telephone (270)265-5817


www.martinandcompany.com

e-mail martin@martinandcompany.com

Installation Instructions for CDP-01

Remove left hand pivot bolt from C125 Wrap Around Row Cleaner.

Install support bracket on inside with welded spacer block to outside of planter unit using 5/8" x 2 1/2" hex head bolt and thin nyloc nut provided, as shown.

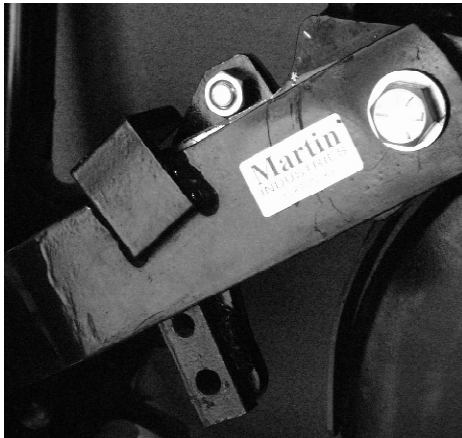

Place 1/2" x 1" hex head bolt provided in top hole of support bracket with nut to outside. Hex nut should be resting on row cleaner mounting bracket, as shown.

Remove existing 1/2" x 3" tap bolt from stop bracket. Install spring in short end of L bracket and mount to stop bracket using 1/2" x 1" hex bolt (furnished) as shown.



Place bushing in large hole of spring bracket. Mount in lower hole of support bracket using 1/2" x 2 1/2" hex bolt furnished. Place cam between spring arm and support bracket as shown. Secure with 1/2" flange lock nut (furnished) as shown.

